

# REDWOOD Path Light



## DESCRIPTION

The Brilliance Metal Works Redwood Contemporary Path Light comes complete with a reflector window that can be adjusted from side to side and locked in with a set screw, ABS mounting stake, and LightingShrink professional crimp and heat shrink cable connector.

**LAMP:** G4 Rectangular Wafer

**FINISH:** Brass, copper, or blackened brass

**USE:** Path, area, and garden accent lighting




Part Number: **REDWOOD PL-G4-BR-18-CU-STEM**

**BR-STEM**

**BR-BLK-STEM**

Part Number: **REDWOOD PL-G4-BR-BLK-18-BR-BLK-STEM**

\*All Black Fixture

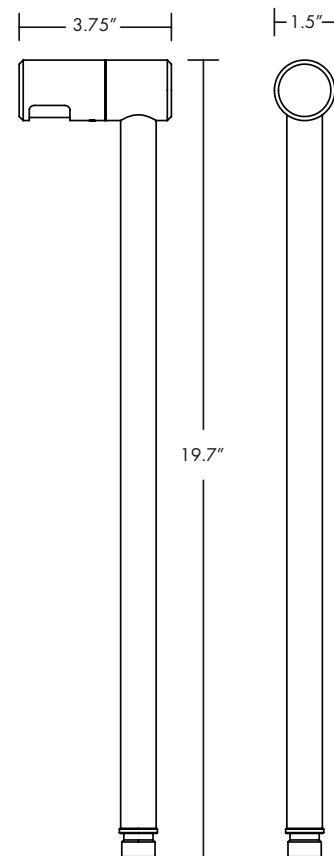

**REDWOOD PL-G4-BR-18-CU-STEM**

## INSTALLING THE LAMP

1. Loosen the set screw at the bottom of the fixture.
2. Remove the brass cap.
3. Install the G4 Wafer into the socket.
4. Place the brass cap back on the fixture body.
5. Adjust the window in the direction light is desired.

## INSTALLING THE GROUND STAKE

1. Dig a hole in the ground approximately 4" wide by 10" deep.  
A rubber mallet may be used to drive the stake into the ground when working with soft soil.
2. Lay the power cable from the fixture into the slotted relief on the stake.
3. Screw the fixture into the stake.
4. Use a level to assure the top of the spike is level with the ground.

## ADJUSTING THE FIXTURE

1. Turn the threaded ring counterclockwise to loosen the lid.
2. Find the right light pattern by moving the lid up and down on the stem.
3. Turn the threaded ring clockwise to lock the lid into the desired position.